



Illustrated Parts List

Model Series

09P700

TYPE NUMBERS
0001 through 0118.

TABLE OF CONTENTS

 

 

 
 





Air Cleaner	3
Armature	7
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	7
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electrical System	7
Exhaust System	5
Flywheel	6
Fuel Supply	5
Gasket Set	2
Governor Spring	7
Ignition	7
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	6
Spark Plug	7
Sump	2
Warning Label	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

09P700

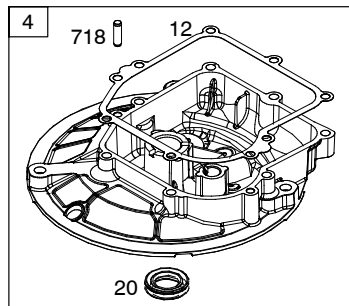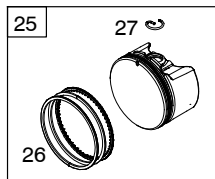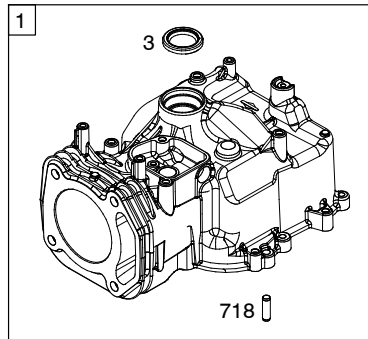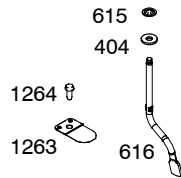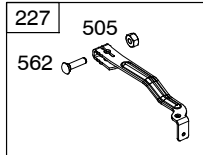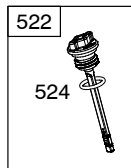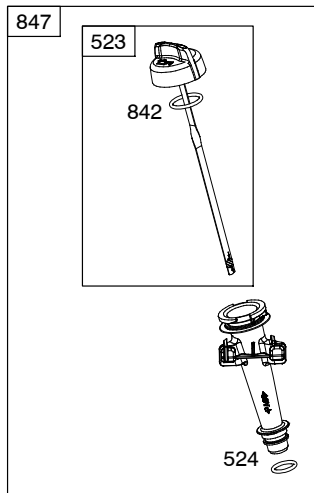

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL




REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL





1036 EMISSIONS LABEL

358 ENGINE GASKET SET

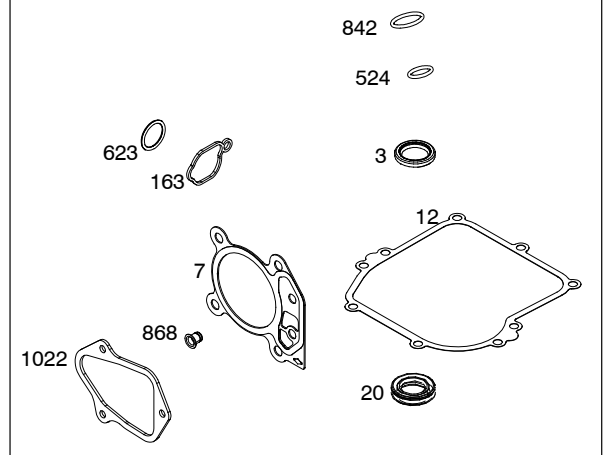


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

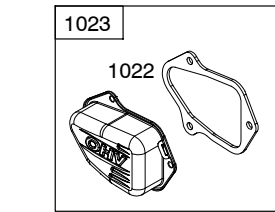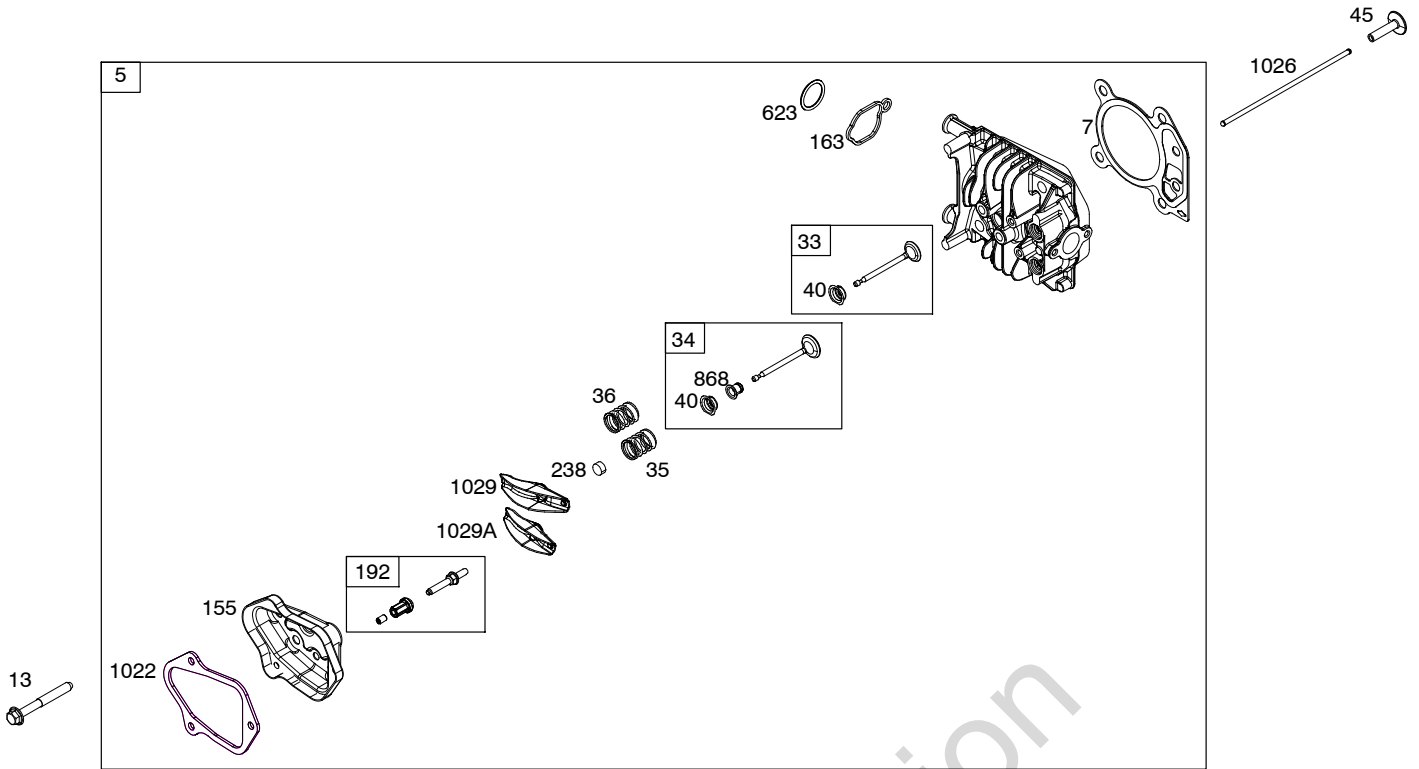







914

Not for
Reproduction




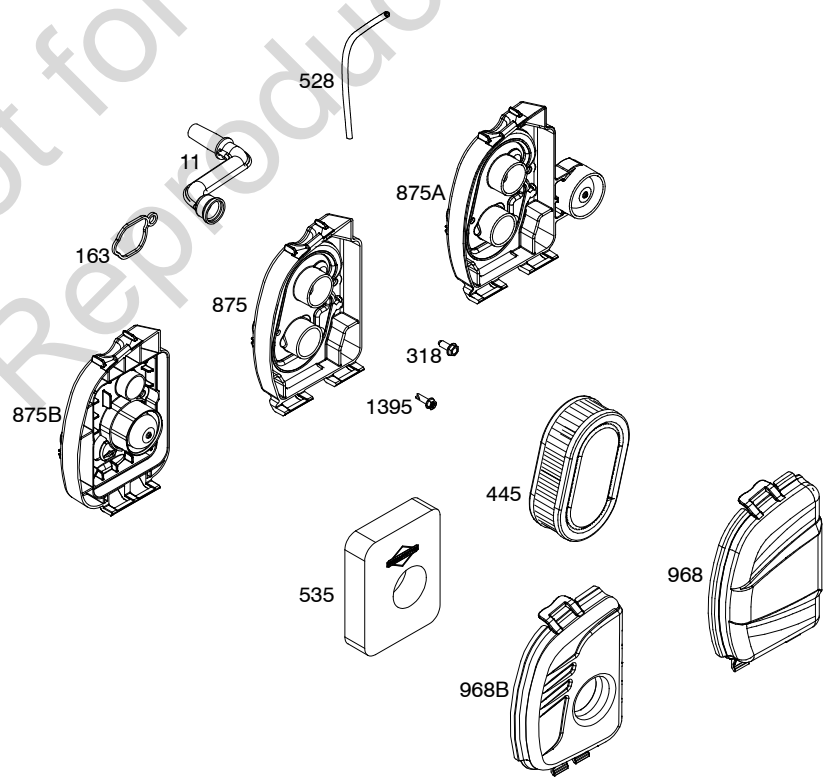


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

09P700

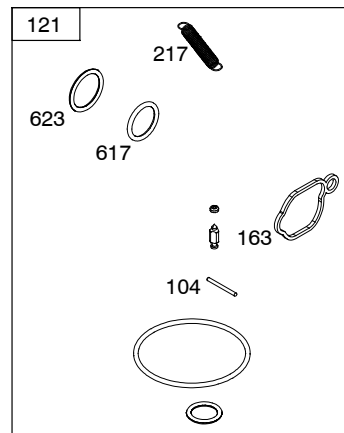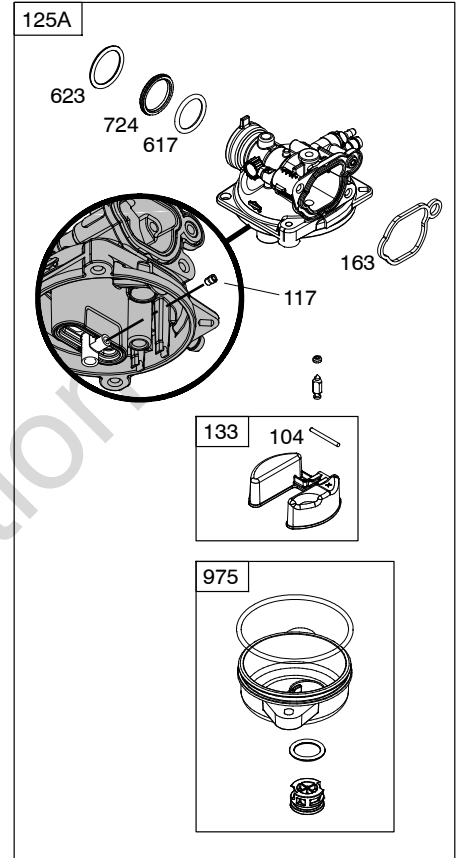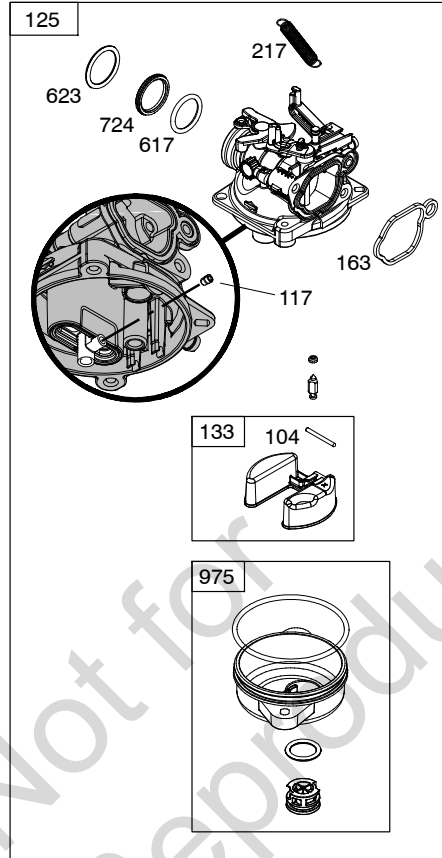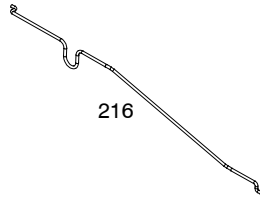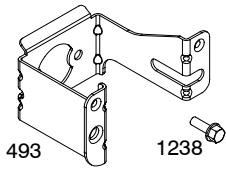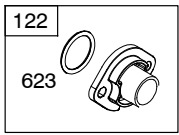


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

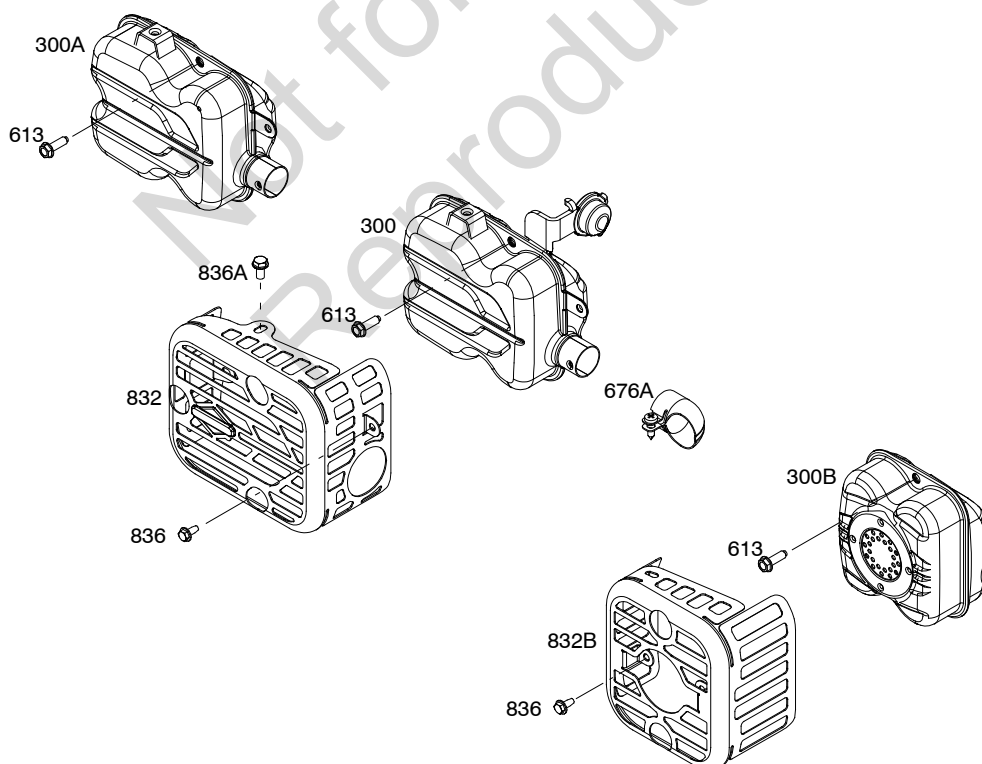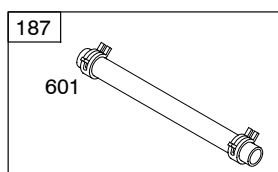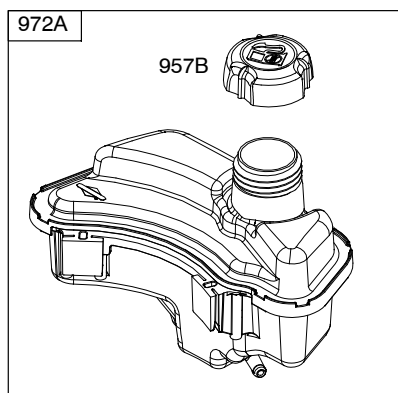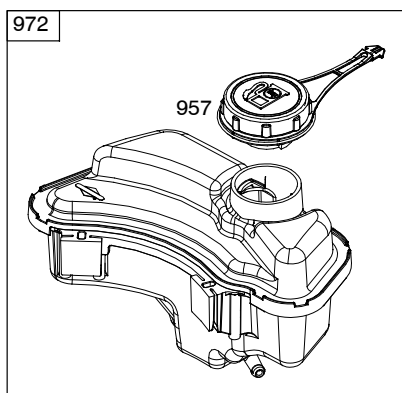


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

09P700

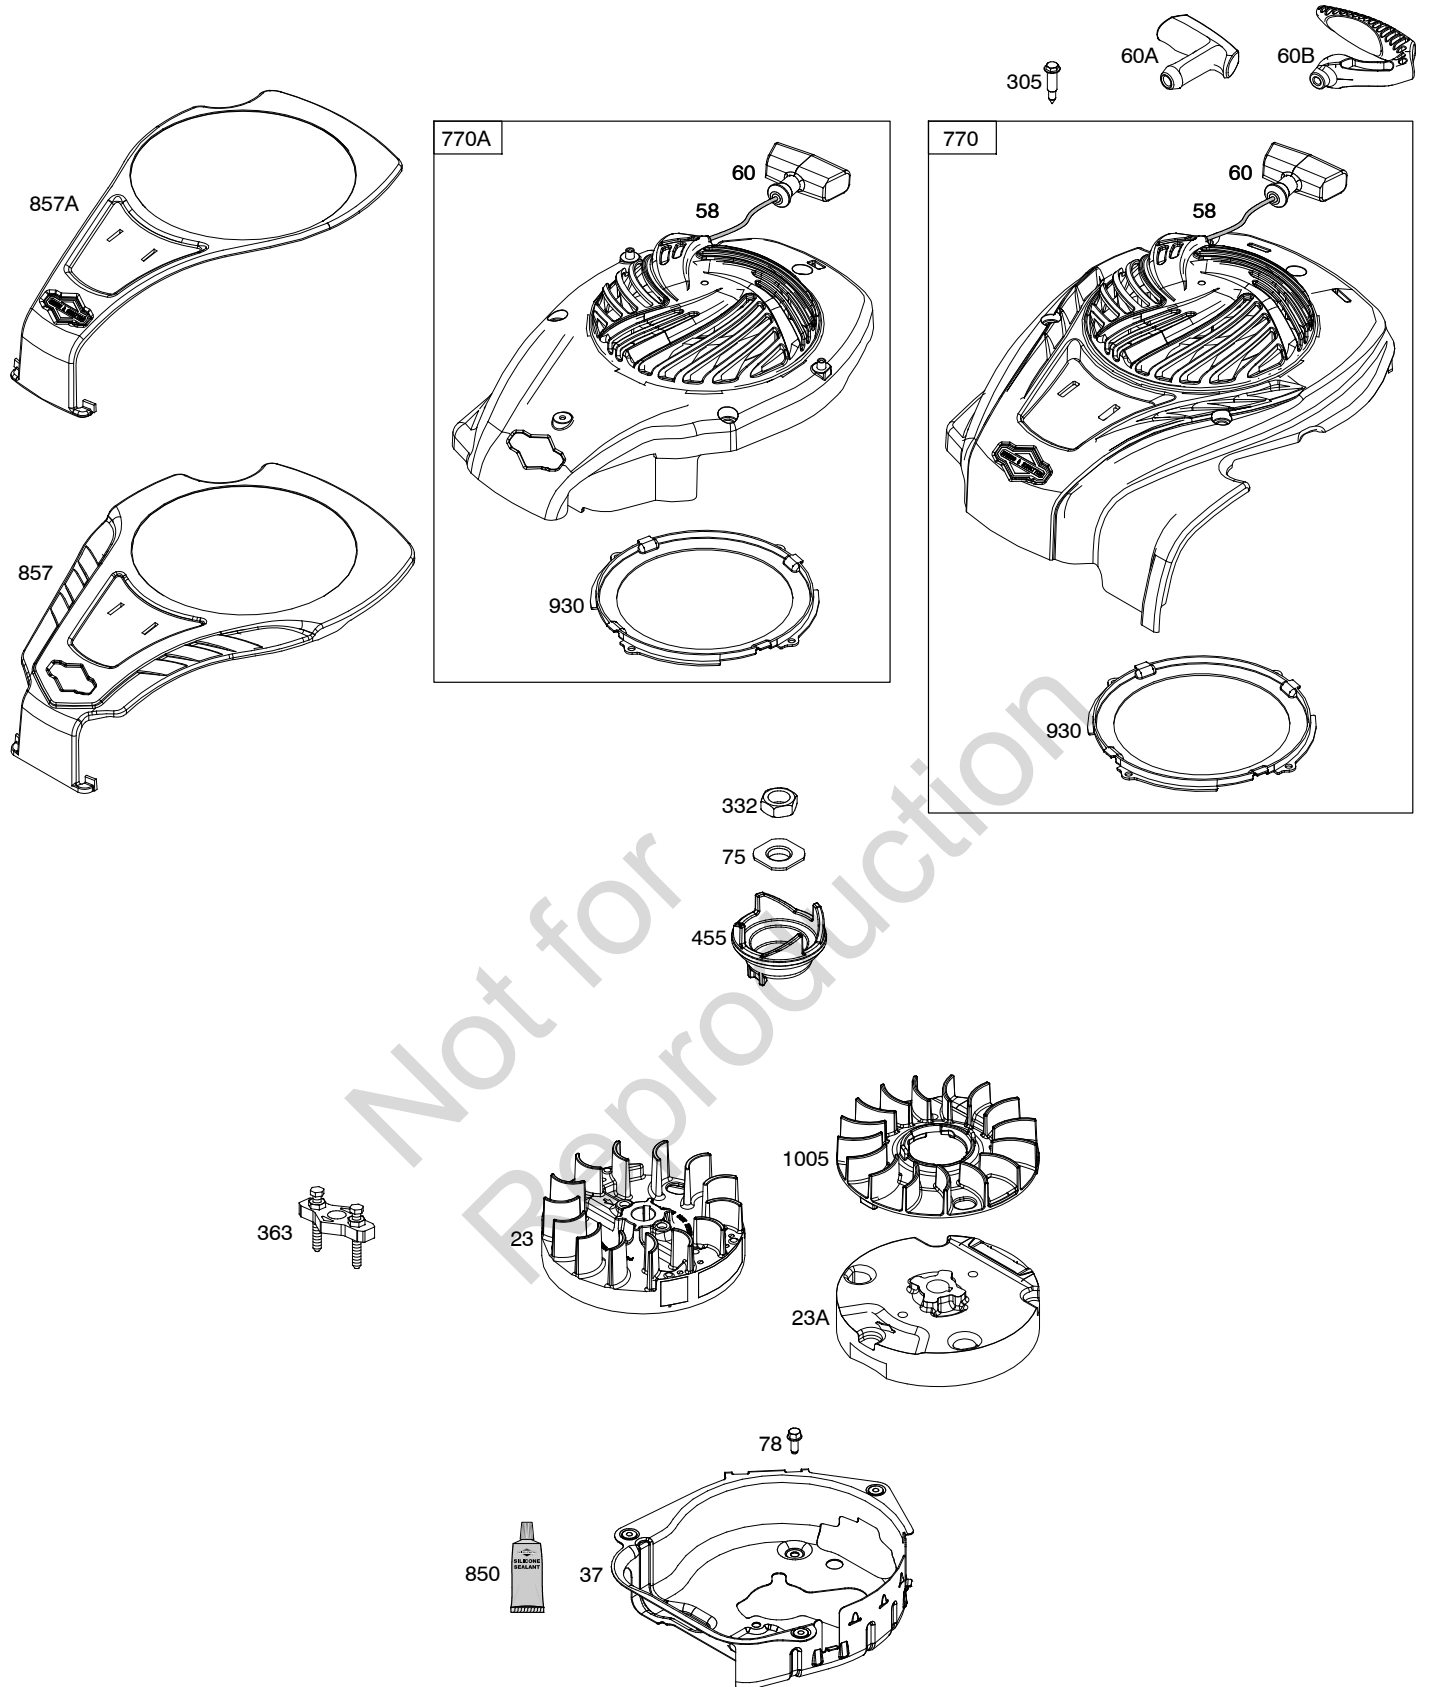

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

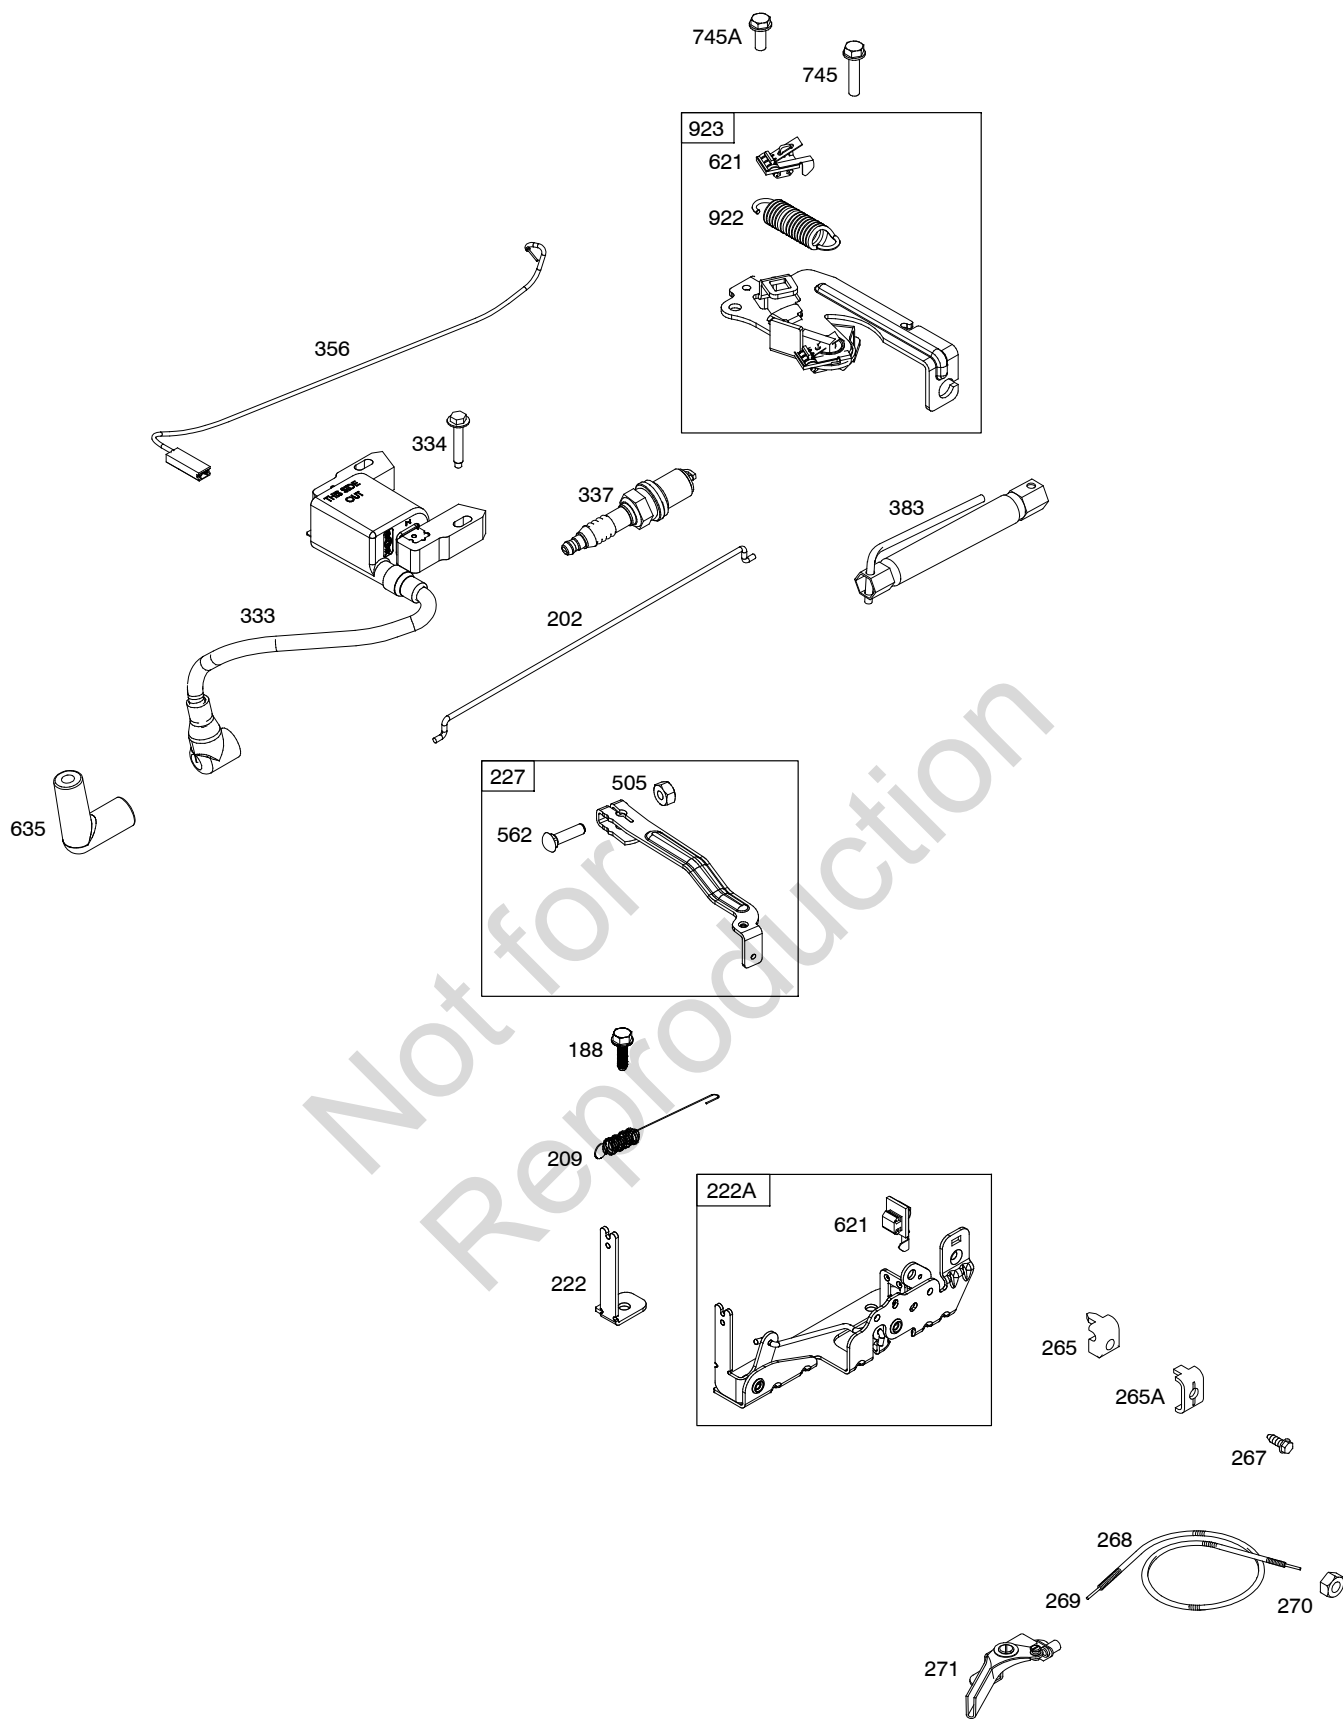

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

09P700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	590519	Cylinder Assembly	29	590518	Rod-Connecting	118	591996	Jet-Main
3	299819s	Seal-Oil (Magneto Side)	32	691664	Screw (Connecting Rod)			(High Altitude)
4	590569	Sump-Engine	33	590531	Valve-Exhaust			----- Note -----
5	590525	Head-Cylinder	34	590530	Valve-Intake			591995 Jet-Main
7	799586	Gasket-Cylinder Head	35	590532	Spring-Valve (Intake)			(High Altitude)
11	590522	Tube-Breather	36	590532	Spring-Valve (Exhaust)			Used on Type No(s).
12	799587	Gasket-Crankcase	37	590582	Guard-Flywheel			0001, 0003, 0005,
13	590512	Screw (Cylinder Head)			----- Note -----			0006, 0007, 0010,
16	590538	Crankshaft			591904 Guard-Flywheel			0024, 0033, 0045,
		----- Note -----			Used on Type No(s).			0046, 0047, 0055,
		590537 Crankshaft	40	590528	Retainer-Valve			0075, 0087, 0098,
		Used on Type No(s).	43	697799	Slinger-Governor/Oil			0104, 0115.
		0011, 0012, 0013,	45	590514	Tappet-Valve			591994 Jet-Main
		0014, 0015, 0016,	46	590524	Camshaft			(High Altitude)
		0017, 0018, 0019,	58	591108	Rope-Starter			Used on Type No(s).
		0028, 0029, 0031,	60	691915	Grip-Starter Rope			0002, 0004, 0008,
		0042, 0043, 0044,	60A	281434s	Grip-Starter Rope			0009, 0025, 0027,
		0046, 0049, 0050,	60B	799716	Grip-Starter Rope			0036, 0037.
		0054, 0056, 0060,	75	590546	Washer (Flywheel)	121	590589	Kit-Carburetor
		0062, 0065, 0071,	78	793480	Screw (Flywheel Guard)			Overhaul
		0072, 0084, 0085,	104	590558	Pin-Float Hinge	122	590549	Spacer-Carburetor
		0086, 0092, 0093,	117	591999	Jet-Main (Standard)	125	591109	Carburetor
		0094, 0095, 0096,			----- Note -----			----- Note -----
		0097, 0102, 0105,			591998 Jet-Main			799584 Carburetor
		0106, 0109, 0111,			(Standard)			Used on Type No(s).
		0112, 0113, 0114.			Used on Type No(s).			0001, 0003, 0005,
		591152 Crankshaft			0006, 0007, 0010,			0024, 0033, 0045,
		Used on Type No(s).			0024, 0033, 0045,			0046, 0047, 0055,
		0037, 0047.			0075, 0087, 0098,			0075, 0098, 0104,
20	391483s	Seal-Oil (PTO Side)			0104, 0115.			0115.
22	692551	Screw (Crankcase Cover/Sump)			591997 Jet-Main	125A	591110	Carburetor
22A	590763	Screw (Crankcase Cover/Sump)			(Standard)			Used on Type No(s).
23	590544	Flywheel			Used on Type No(s).			0011, 0012, 0015,
23A	592005	Flywheel			0001, 0003, 0005,			0017, 0021, 0023,
24	222698s	Key-Flywheel			0006, 0007, 0010,			0028, 0029, 0034,
25	590521	Piston Assembly (Standard)			0024, 0033, 0045,			0040, 0043, 0048,
26	590523	Ring Set (Standard)			0046, 0047, 0055,			0056, 0057, 0058,
27	691588	Lock-Piston Pin			0075, 0087, 0098,			0064, 0065, 0066,
28	699659	Pin-Piston			0104, 0115.			0067, 0068, 0069,
					591997 Jet-Main			0070, 0079, 0084,
					(Standard)			0088, 0094, 0095,
					Used on Type No(s).			0096, 0097, 0100,
					0002, 0004, 0008,			0101, 0106, 0108,
					0009, 0025, 0027,			0109, 0114, 0118.
					0036, 0037.			----- Note -----
								590556 Carburetor
								Used on Type No(s).
								0002, 0004, 0008,
								0009, 0025, 0027,
								0036, 0037.
								590555 Carburetor
								Used on Type No(s).
								0087.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10242-8 Assemblies include all parts shown in frames. 11/27/2012

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
133	591120	Float-Carburetor	305	590586	Screw (Blower Housing)	562	793514	Bolt (Governor-Control Lever)
155	590529	Plate-Cylinder Head	318	793480	Screw (Mounting Bracket)	601	791850	Clamp-Hose
163	799580	Gasket-Air Cleaner	332	690662	Nut (Flywheel)	613	590562	Screw (Muffler)
187	791766	Line-Fuel (Cut To Required Length)	333	799582	Armature-Magneto	615	690340	Retainer-Governor Shaft
188	793480	Screw (Control Bracket)	334	691061	Screw (Magneto Armature)	616	590516	Crank-Governor
192	590535	Adjuster-Rocker Arm	337	692051	Plug-Spark	617	270344s	Seal-O Ring
202	590517	Link-Mechanical Governor			----- Note -----	621	692310	Switch-Stop
209	590541	Spring-Governor			491055s Plug-Spark	623	799581	Seal-O Ring (Carburetor Spacer)
		----- Note -----			Used on Type No(s). 0007, 0008, 0009.	635	692076	Boot-Spark Plug
		591497 Spring- Governor			797434 Plug-Spark	676A	799187	Deflector-Muffler
		Used on Type No(s). 0057, 0058, 0067, 0068, 0069, 0070, 0072, 0075, 0080, 0081.			Used on Type No(s). 0015.	718	690959	Pin-Locating (Crankcase Cover)
216	590547	Link-Choke			692720 Plug-Spark	724	697478	Retainer-Seal
217	590740	Spring-Choke Return			Used on Type No(s). 0011, 0014, 0016, 0017, 0018, 0022, 0028, 0049, 0054, 0084, 0085, 0100, 0112.	741	796210	Gear-Timing (Plastic)
222	590560	Bracket-Control	356	692390	Wire-Stop	745	691146	Screw (Brake)
222A	590561	Bracket-Control	358	590590	Gasket Set-Engine	745A	690859	Screw (Brake)
227	590520	Lever-Governor Control	363	19069	Puller-Flywheel	770	591139	Kit-Rewind/Blower Housing
238	590533	Cap-Valve	363	19069	Puller-Flywheel	770A	592049	Kit-Rewind/Blower Housing
265	690798	Clamp-Casing	383	19576s	Wrench-Spark Plug			Used on Type No(s). 0084, 0085, 0101, 0107, 0115.
265A	691024	Clamp-Casing	404	690272	Washer (Governor Crank)	832	590566	Guard-Muffler
267	691044	Screw (Casing Clamp)	445	798452	Filter-Air Cleaner Cartridge	832B	590567	Guard-Muffler
268	691025	Casing-Control Wire (Cut To Required Length)	455	590545	Cup-Flywheel	836	690661	Screw (Muffler Guard)
269	691026	Wire-Control (Cut To Required Length)	493	590551	Bracket-Mounting (Carburetor)	836A	793500	Screw (Muffler Guard)
270	691027	Nut (Control Wire Casing)	505	793515	Nut (Governor Control Lever)	842	691876	Seal-O Ring (Dipstick Tube)
271	691028	Lever-Control	522	590580	Plug-Dipstick/Fill	847	590572	Dipstick/Tube Assembly
300	590563	Muffler	523	796503	Dipstick	850	100106	Sealant-Silicone
300A	590564	Muffler Used on Type No(s). 0034, 0057, 0058, 0065, 0087, 0106.	524	691876	Seal-Dipstick Tube	857	591113	Trim-Blower Housing Cover
300B	590565	Muffler	528	793006	Hose-Primer (Cut to Required Length)	857A	591114	Trim-Blower Housing Cover
			535	799579	Filter-Air Cleaner Foam			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10242-9 Assemblies include all parts shown in frames. 11/27/2012

09P700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
868	590534	Seal-Valve (Intake)	968	590548	Cover-Air Cleaner	1058	381266	Manual-Operator's
875	590553	Base-Air Cleaner	968B	590581	Cover-Air Cleaner	1127	590554	Screw (Float Bowl to Carburetor Body)
875A	590557	Base-Air Cleaner	972	590568	Tank-Fuel	1238	590550	Screw (Carburetor Spacer)
875B	590584	Base-Air Cleaner	972A	591947	Tank-Fuel	1263	697124	Reed-Breather
914	591103	Screw (Rocker Arm Cover)	975	591492	Bowl-Float	1264	793453	Screw (Breather Reed)
922	692135	Spring-Brake	1005	592050	Fan-Flywheel	1319	794467	Label-Warning
923	691487	Brake	1022	591255	Gasket-Rocker Cover	1319A	797669	Label-Warning
930	590585	Guard-Rewind	1023	590513	Cover-Rocker Arm	1395	590552	Screw (Air Cleaner Base to Carburetor)
951	591104	Lever-Choke	1026	590515	Rod-Push			
957	799585	Cap-Fuel Tank (Black)	1029	590526	Arm-Rocker			
		----- Note -----	1029A	590527	Arm-Rocker			
		591003 Cap-Fuel Tank (Red)	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)			
957A		Cap-Fuel Tank (Order Replacement Fuel Tank Cap Reference Number 957)						
957B	692046	Cap-Fuel Tank						

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

